


# TO WASH



- 1 TO OPEN, TURN THE HANDLE
- 2 FILL THE MACHINE WITHOUT PACKING THE LAUNDRY.
- 3 CLOSE THE DOOR PROPERLY.
- 4 CHOOSE YOUR PROGRAM.
- 5 ADD YOUR DETERGENT INTO THE TUB OF THE WASHING MACHINE (DETERGENT AVAILABLE FROM DISPENSER N°12)

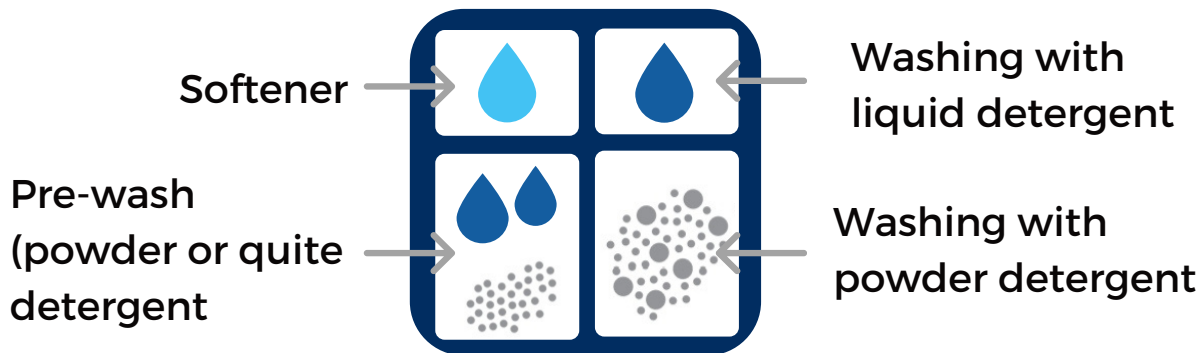

- 6 GO TO THE PAYMENT CENTER, DIAL YOUR MACHINE NUMBER, PAY THE AMOUNT INDICATED ON THE SCREEN.
- 7 THE MACHINE STARTS.
- 8 AT THE END OF THE CYCLE, THE MACHINE UNLOCKS.

# TO DRY

**1** SEPARATE THE LAUNDRY WELL, DO NOT OVERLOAD THE DRYER.

**2** CLOSE THE MACHINE DOOR AND SELECT THE TEMPERATURE.



High temperature



Medium temperature



Low temperature



No heating

**3** GO TO THE PAYMENT CENTER, DIAL THE NUMBER OF YOUR DRYER, PAY THE AMOUNT INDICATED ON THE SCREEN.

**4** PRESS THE START BUTTON  



- Do not put wool, Rhovyl or cadron in the dryer
- You can buy several consecutive drying cycles from the payment center.
- You can open the door of the dryer during the cycle in order to remove laundry.

# SECURITY

- FILL THE MACHINE WITHOUT PACKING UNLOCKS. THE MACHINE CAN SPIN FAST, AND THE WASHING WATER CAN RISE UP TO 90°C.
- KEEP AN EYE ON THE CHILDREN WHEN THEY STAY CLOSE TO THE MACHINES.
- DO NOT LET THE CHILDREN MANIPULATE / USE THE MACHINES.
- DO NOT FORCE OPEN THE DOOR OR LIDS OF THE MACHINES.
- WAIT FOR THE MACHINE TO FULLY STOP BEFORE OPENING THE DOOR OR THE LID.

Please notify any problem, moreover security problems, by calling this number :

**+33 7 63 56 63 09**

# RESPONSABILITY

- YOUR SELF-SERVICE LAUNDROMAT IS UNDER YOUR OWN RESPONSIBILITY.
- DIRECTION IS IN NO CASE RESPONSIBLE FOR STEALING OR MISTAKES.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE MACHINES.

# PAYMENT

HERE  
PAY WITH YOUR SMARTPHONE THANKS TO THE  
APPLICATIONS:



to initiate the payment, do not  
forget to press start.



*"At the laundromat, we know how to welcome you"!*



**Our website :**

<https://www.espace-lavomatique.com/>

